



# Uni DMX controls and accessories

## ZXP399 standalone controller 12V DMX

ZXP399 DMX Controls and Accessories - 12 DC V - - Hz -  
Finger-protected - CE mark - Black

The ZXP399 DMX Controls and Wiring Accessories are to be used with our architectural and facade lighting luminaires (UniFlood C, M and G, UniStrip G4, UniEdge, UniDot G2, UniString and UniBar). DMX Controls include main controller, stand-alone controller, sub-controllers, DMX amplifier and DMX addressing device. Main Controller: Industrial computer that can control up to 6000 DMX universes. Stand-alone Controller: Fits for medium applications with up to 700 DMX universes. Wiring accessories include leader and jumper cables with male and female IP67 connectors and end-caps. Addressing Device: Hand-held device that can write DMX addresses to a whole run on-site within minutes. DMX Amplifier: Compact, IP65 and low power repeater that can amplify the DMX signal for up 100 meters.

### Product data


| General information      |          | Overall height                      |                                      |
|--------------------------|----------|-------------------------------------|--------------------------------------|
| CE mark                  | CE mark  | Overall height                      | 66 mm                                |
| Accessory color          | Black    | Dimensions (Height x Width x Depth) | 66 x 193 x 278 mm                    |
| Operating and electrical |          | Approval and application            |                                      |
| Input Voltage            | 12 DC V  | Ingress protection code             | IP20 [ Finger-protected]             |
| Input Frequency          | - Hz     | Product data                        |                                      |
| Mechanical and housing   |          | Full product code                   | 871951494687399                      |
| Overall length           | 277.6 mm | Order product name                  | ZXP399 standalone controller 12V DMX |
| Overall width            | 193 mm   | EAN/UPC - Product                   | 8719514946873                        |
|                          |          | Order code                          | 911401756632                         |

## Uni DMX controls and accessories

|                                 |              |
|---------------------------------|--------------|
| Numerator - Quantity Per Pack   | 1            |
| Numerator - Packs per outer box | 2            |
| Material Nr. (12NC)             | 911401756632 |
| Net Weight (Piece)              | 0.749 kg     |



### Dimensional drawing

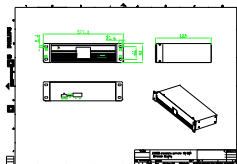

ZXP399 standalone controller 12V DMX

