

# MASTER PL-S 2 Pin

## MASTER PL-S 7W/827/2P 1CT/10

MASTER PL-S is an efficient low-wattage compact fluorescent lamp, typically used for decorative and orientation purposes. The original Philips-invented bridge technology guarantees optimum performance in the application, enabling more light and higher efficacy than the bended technology. The 2-pin version is designed for operation on electromagnetic gear and is provided with a plug-in/pull-out lamp base

### Warnings and Safety

- Use only with electromagnetic control gear
- Lamp light technical and electrical characteristics are influenced by operating conditions, i.e. lamp ambient temperature and operating position
- Dimming is not possible
- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.

### Product data


General information		Luminous Flux (Rated) (Nom)	
Cap-Base	G23 [ G23]		405 lm
Life To 10% Failures (Nom)	0 h	Color Designation	Incandescent White
Life to 50% Failures (Nom)	10000 h	Correlated Color Temperature (Nom)	2700 K
LSF 2000 h Rated	99 %	Luminous Efficacy (rated) (Nom)	57 lm/W
LSF 4000 h Rated	98 %	Color Rendering Index (Nom)	82
LSF 6000 h Rated	95 %	LLMF 2000 h Rated	94 %
LSF 8000 h Rated	86 %	LLMF 4000 h Rated	91 %
		LLMF 6000 h Rated	89 %
		LLMF 8000 h Rated	86 %
Light technical		Operating and electrical	
Color Code	827 [ CCT of 2700K]	Power (Rated) (Nom)	7.1 W
Luminous Flux (Nom)	400 lm		

# MASTER PL-S 2 Pin

Lamp Current (Nom)	0.175 A
<b>Temperature</b>	
Design Temperature (Nom)	28 °C
<b>Controls and dimming</b>	
Dimmable	No
<b>Mechanical and housing</b>	
Cap-Base Information	2P
<b>Approval and application</b>	
Mercury (Hg) Content (Nom)	1.4 mg
Energy Consumption kWh/1000 h	9 kWh

<b>Product data</b>	
Full product code	871869960694700
Order product name	MASTER PL-S 7W/827/2P 1CT/10
EAN/UPC - Product	8718699606947
Order code	927935682765
Numerator - Quantity Per Pack	1
Numerator - Packs per outer box	10
Material Nr. (12NC)	927935682765
Net Weight (Piece)	26.000 g
ILCOS Code	FSD-7/27/1B-I-G23


## Dimensional drawing

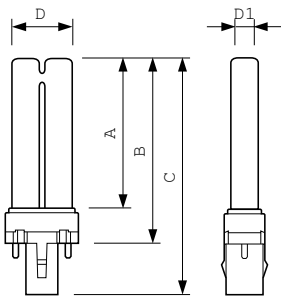


MASTER PL-S 7W/827/2P 1CT/10

Product	D (max)	D1 (max)	A (max)	B (max)	C (max)
MASTER PL-S 7W/827/2P 1CT/10	28 mm	13 mm	97 mm	113 mm	135 mm

## Photometric data

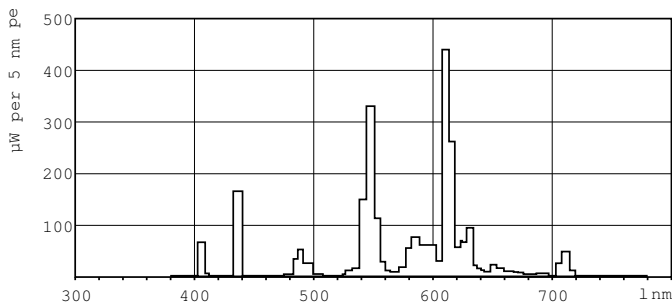

Lightcolor /827

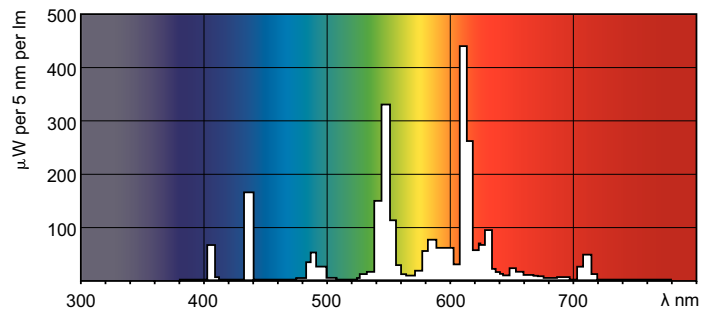

Lightcolor /827

# MASTER PL-S 2 Pin

## Lifetime



### Life Expectancy 12 h cycle



### Life Expectancy 3 h cycle

### Lumen Maintenance 3 h + 12 h cycle

