




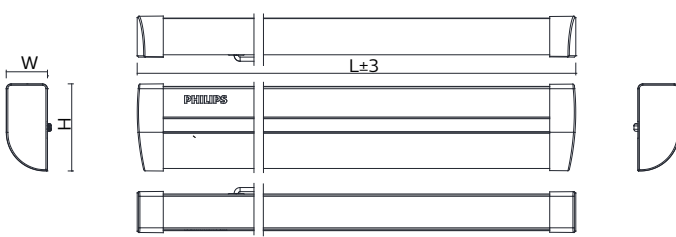
TwinGlow Batten

BN040C


Mounting Instruction

	IP20		220V 240V	50Hz 60Hz	IEC 60598	LIFE L70 20K Hrs	
---	-------------	---	----------------------	----------------------	----------------------	---------------------------------	---

Product Type	Power(W)	Vol. / Fre.	L(mm)	W(mm)	H(mm)	CCT	kg
BN040C LED20-20/CW-WW L1200	20	220-240V~ 50/60Hz	1184	32	67.5	3000K /6500K	0.42




luminous surface/Light areas

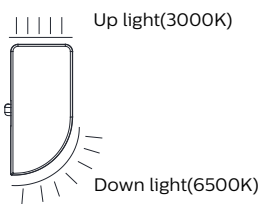


Color temperature(luminous surface) changed


ON




ON




ON→OFF→ON
<5sec



ON→OFF→ON→OFF→ON
<5sec



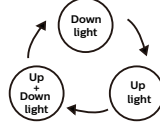


Remark:

- In order to do change setting, please do switching within 5 seconds.
- This product comes with scene memory. So, whatever scene is there, 10sec after turn off, will stay in memory. Next time switching on will give the same scene setting as last time.
- The scene setting is always in this sequence – Down light / Up light / Both.
- If one switch control more luminaires, Quickly Toggle switch On three times within 1.2s, All luminaires set to Down light scene.

Installation



Wall Mounting

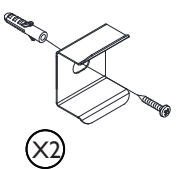

Mounting distance

Unit (mm)


600-800

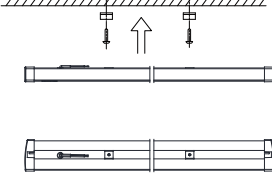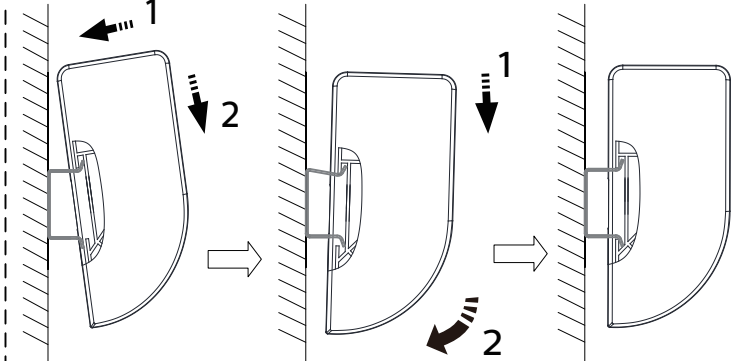
Cable Connection

60227 IEC 53 2X0.75mm²


Brown — L
Blue — N




Suggest to use IP20 or above terminal box (dimension is not smaller than 10x20x25mm, not provided)



1. The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
2. Do not switch on before complete installation.
3. The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
4. The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.
5. The corrosive atmosphere or hazardous materials such as sulfur, chlorine, phthalate, etc must be avoided during the use and storage.

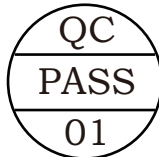



Philips and the Philips shield emblem are registered trademarks of Koninklijke Philips N.V.