



3-circuit Square RCS750

RCS750 3C L3000 ALU (XTS4300-1)

3-circuit track


The RCS750 3-circuit square track system is made up of a solid aluminum track available in lengths of 1, 2, 3 and 4 m with four electrical conductors. Any given configuration can be created easily: horizontal or vertical, mounted on or in the ceiling, on the wall or on free-standing panels. The system can also be used as a floating structure. All luminaires have a separate power supply and can be switched selectively. They can be moved easily to change the lighting and presentation. In this way, a multifunctional track system can be created for accent lighting as well as for suspending advertising and decorative material. A range of adaptors, power supply connections and mounting accessories is also available.

Product data


General Information		Length	
Protection class IEC	Safety class I (I)	Length	3.0 m
Glow-wire test	850/5 [Temperature 850 °C, duration 5 s]	Dimensions (Height x Width x Depth)	NaN x NaN x 3000 mm (NaN x NaN x 118.1 in)
Suspension accessories	No [-]	Approval and Application	
Mechanical accessories	No [-]	Ingress protection code	IP30 [Tool-protected]
Accessory color	Aluminum	Product Data	
Operating and Electrical		Full product code	871155938108400
Electrical accessories	No [-]	Order product name	RCS750 3C L3000 ALU (XTS4300-1)
Circuit	3C [3-circuit track]	EAN/UPC - Product	8711559381084
Mechanical and Housing		Order code	910500188615
Overall length	3000 mm	Numerator - Quantity Per Pack	1
		Numerator - Packs per outer box	1

3-circuit Square RCS750

Material Nr. (12NC)	910500188615
Net Weight (Piece)	2.600 kg



Dimensional drawing

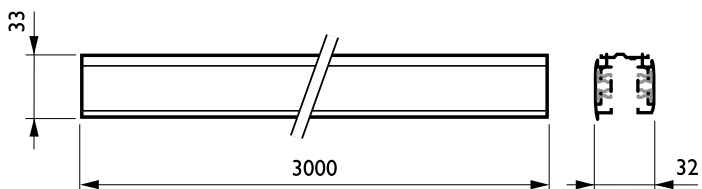

3-circuit square RCS750

