



3-circuit Square RCS750

RBS750 3C L2000 WH (XTSF4200-3)

3-circuit track

The RCS750 3-circuit square track system is made up of a solid aluminum track available in lengths of 1, 2, 3 and 4 m with four electrical conductors. Any given configuration can be created easily: horizontal or vertical, mounted on or in the ceiling, on the wall or on free-standing panels. The system can also be used as a floating structure. All luminaires have a separate power supply and can be switched selectively. They can be moved easily to change the lighting and presentation. In this way, a multifunctional track system can be created for accent lighting as well as for suspending advertising and decorative material. A range of adaptors, power supply connections and mounting accessories is also available.

Product data

General Information		Length	
Protection class IEC	Safety class I (I)	Length	2000 mm
Glow-wire test	850/5 [Temperature 850 °C, duration 5 s]	Dimensions (Height x Width x Depth)	NaN x NaN x 2000 mm (NaN x NaN x 78.7 in)
Suspension accessories	No [-]	Approval and Application	
Mechanical accessories	No [-]	Ingress protection code	IP30 [Tool-protected]
Accessory color	White	Product Data	
Operating and Electrical		Full product code	871155914980600
Electrical accessories	No [-]	Order product name	RBS750 3C L2000 WH (XTSF4200-3)
Circuit	3C [3-circuit track]	EAN/UPC - Product	8711559149806
Mechanical and Housing		Order code	910930009118
Overall length	2000 mm	Numerator - Quantity Per Pack	1
		Numerator - Packs per outer box	1

3-circuit Square RCS750


Material Nr. (12NC) 910930009118

Net Weight (Piece) 1.900 kg

850°C

IP30

Dimensional drawing

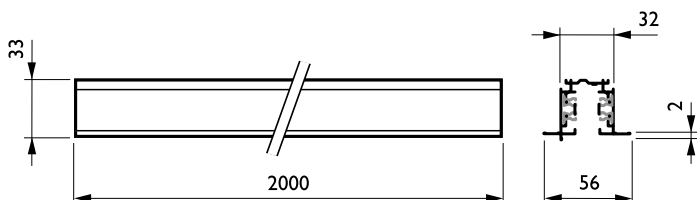

3-circuit square RCS750

